

The Application of a single PC machine works with multiple instruments

I Overview


If you are using multiple instruments with USB interface to communicate with PC on-line, you can connect them with a PC machine. But before connecting you should make sure that your PC has multi-path USB interfaces. After connecting, it is possible to operate multiple instruments to sample data, communicate and manage them centrally at the same time so that the measurement becomes simpler and faster. Meanwhile, it is convenient to be operated.

I Connection Diagram

At first you must be sure that your PC has enough standard USB interfaces to connect instruments. If the number of USB interfaces is less than instruments, you can add USB interface through using standard USB interface expansion card such as PCI.

Then, you should install driver program of instrument according to the instruction of installing software and at least guarantee one may communicate with PC normally.

Finally, connecting each instrument with PC's a USB interface through an independent USB cable. As show below:

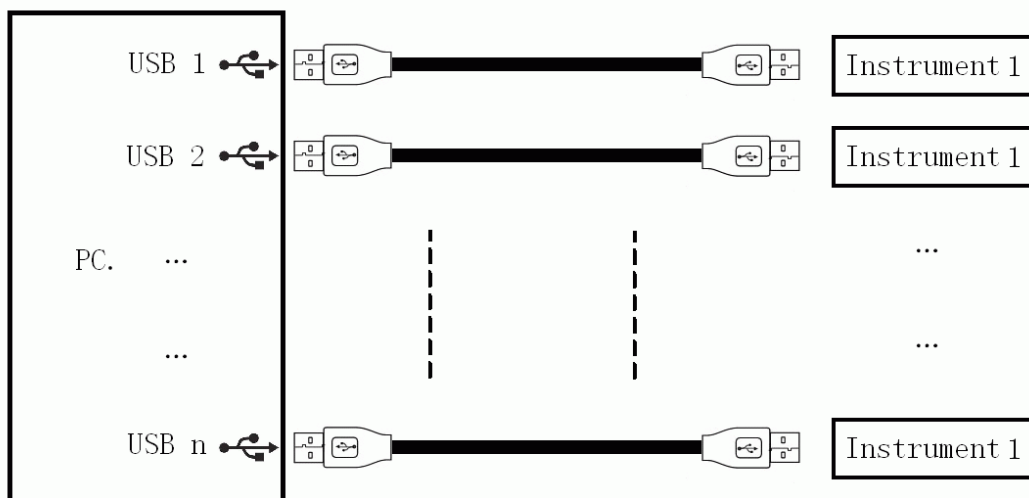


Before operating, setup online parameter of instrument correctly according to the operation manual.

I The usage and configuration of the instrument's USB equipment serial number update software

In order to achieve the identification that a PC communicate with multiple instruments online, it requires to be sure that every instrument has different USB equipment serial number. So at this time you need to make use of utility software to modify the instrument's USB equipment serial number so that it is convenient to identify for computer and user.

USB equipment serial number update software "CP210xSetIDs.exe" is in the "an144sw" file. The an144sw file is stored under the product root directory of CD-ROM file.

When you run the "CP210xSetIDs.exe" application in your computer, its operation interface as show below:

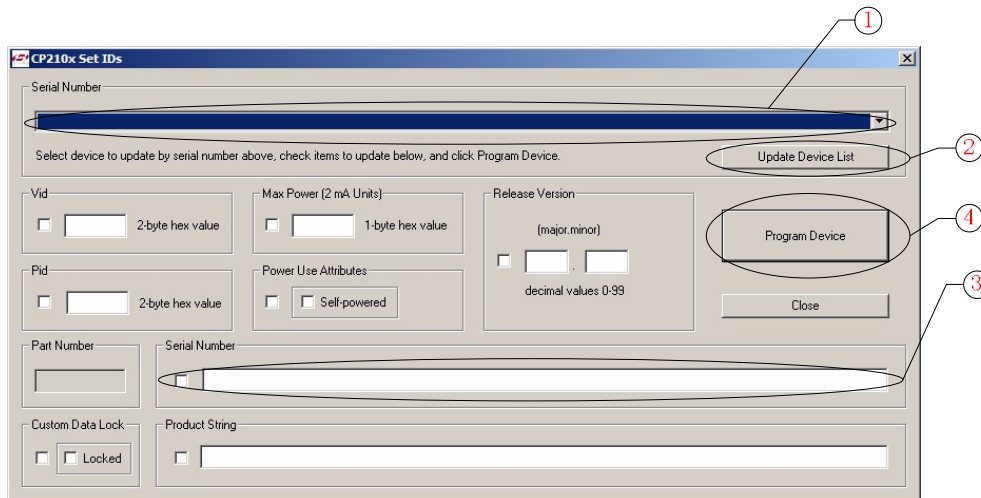

When one instrument has been connected to PC and driven correctly, the corresponding instrument information will be present in the show box 1. If one PC connects with a number of instruments, each one's information will be present in the show box 1. When you want to modify one's USB equipment serial number, you need to click the downward arrow to choose in the right side of show box 1. If one's information is absent in the checkbox 1, you should click button 2 "Update Device List" to refresh equipment list in order to get new instrument's information.

After choosing the instrument's information correctly, the corresponding USB equipment serial number will be present in the show box 3. Now you can modify the serial number in the show box 3 to guarantee all the USB equipment serial numbers are different. Then click checkbox in the left side of show box 3. Finally click button 4 "Program Device" to update the new serial number in the USB equipment.

If one PC connects with many instruments, you shouldn't repeat operation as described above until all instruments' USB equipment serial number are modified and make sure that each serial number is independent. Now it's finished and closed "CP210xSetIDs.exe".